



Nut Adjustment for BOTH Foam Core Door and Metal Door

1. Close the rotor
2. Lock the handle from the inside (using the lower manual lock lever)
3. While pulling up on the inside handle, manually (no power) turn the nut clockwise until the latch releases
4. Manually turn the nut counterclockwise 1-1/4 to 1-1/2 turns
5. Unlock the door and open the door from the inside handle. The latch should release before the inside handle reaches maximum travel.
6. CHECK TO MAKE SURE THE INSIDE HANDLE DOES NOT OPEN THE DOOR WHEN IT IS LOCKED

Foam Core Door

