

2. Orientation of valves for introducing RV Antifreeze for Winterization



2.A. Valve orientation for by-passing water supply from Freshwater Holding Tank



Water supply from freshwater holding tank. Valve across water line, closed

Valve in line with tube for drawing RV Antifreeze into freshwater system. Valve in line with tube, valve open

This white tube is the draw tube that is put into the RV Antifreeze container for the 12V pump when turned on to introduce RV Antifreeze to the freshwater system.