

Pry open speaker grill - there are plastic trim tools - I used a thumb pick for a guitar that I had laying around. The grill just pops out, as does the speaker.



Pop out speaker.



There are two connectors, one on either side of the speaker. One is black, one is white. Disconnect the BACK one only.