

HOW TO CHECK HWH HYDRAULIC FLUID LEVEL

HWH Dexron III Fluid Change on 8/1/2020 Polson, MT Paradise Cove Camping For The Summer (Mileage: 104,600)

I used an electric pump to remove 7 quarts of Dexron III from the HWH reservoir and replenished it with new Dexron III. (Do not use high mileage type Dexron III fluid.)

- * All jacks up.
- * Only the passenger slideout should be extended.
- * Check fluid level with cap screwed-in. Fill to upper mark when cold.
- * Hydraulic system is self-bleeding.

Checking Hydraulic Oil Level

See your 325 Series Leveling System Operators Manual for complete maintenance instructions and information.


All maintenance should be done as part of the normal servicing of the coach.

The oil level should be checked when the vehicle is first purchased and then once every two years. More often if there is an oil leak in the system.

The hydraulic pump is located under the entrance step. See page 13-3.

Jacks and Slideout Positions:

To get an accurate indication of oil level, all leveling Jacks must be UP and slideout rooms must be positioned as follows for each model*.

S36RD S36GD S40FD	All slideout rooms must be IN and all leveling jacks must be UP
S40KD	RH Front Slideout (Galley) room must be OUT but all other slideout rooms must be IN and all leveling jacks must be UP
S40AD 	RH Front Slideout (TV/Refrigerator) room must be OUT but all other slideout rooms must be IN and all leveling jacks must be UP

How to add a ground wire:

