

---

# INSTRUCTION SHEET

## "X" SLIDE ADJUSTMENTS

---

### "X" SLIDE ADJUSTMENTS

The following is intended to address how to make adjustments on "X" Slide rooms. The room should be fully retracted.

**NOTE!! DO NOT ALLOW CYLINDER TO ROTATE DURING ADJUSTMENT. THE CYLINDER TUBE OR FITTING CAN INTERFERE WITH THE MECHANISM IF THE CYLINDER IS ALLOWED TO ROTATE.**

To access the arms contact the vehicle manufacturer for instructions. To adjust the room, loosen the LOWER JAM NUT at the base of the mechanism. Tighten the UPPER JAM NUT one full turn to raise the cylinder. Tighten the LOWER JAM NUT against the bracket. (See diagram below). Try to shake the mechanism, or take the coach on a test drive and listen for "rattle" in the mechanism. If needed, repeat the jam nut adjustments until the rattle is gone. Once the mechanism is properly adjusted, replace the screen over the mechanism.

