



## Micro Minne Trailer De-Winterization

1. Close (push down) low point hot and cold lines in bottom of bathroom closet
2. Close freshwater tank valve under trailer in front of axle
3. Fill freshwater tank with filtered water (may want to add bleach via funnel to disinfect)
4. Unscrew and remove panel under kitchen sink .
5. Open water pump valves to accept freshwater and close off black antifreeze fill tube (pictured below)

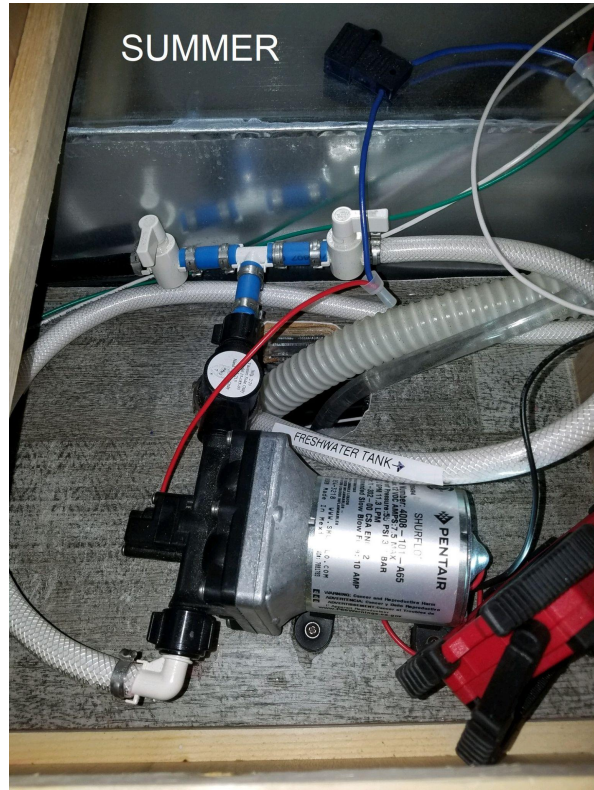

6. Turn on water pump
7. Open kitchen sink hot and cold sink handles individually to flush antifreeze
8. Open bath sink hot and cold sink handles individually to flush antifreeze
9. Open indoor shower sink hot and cold sink handles individually to flush antifreeze
10. Open outdoor shower sink hot and cold sink handles individually to flush antifreeze
11. Flush toilet to flush antifreeze
12. Turn off water pump
13. Open outdoor water heater panel and insert 1" plug left out over winter
14. Open pressure release valve to allow air release
15. Unscrew and remove panel underneath bathroom sink
16. Open up bypass valves on water heater so the handles are pointing towards the water heater (pictured below)

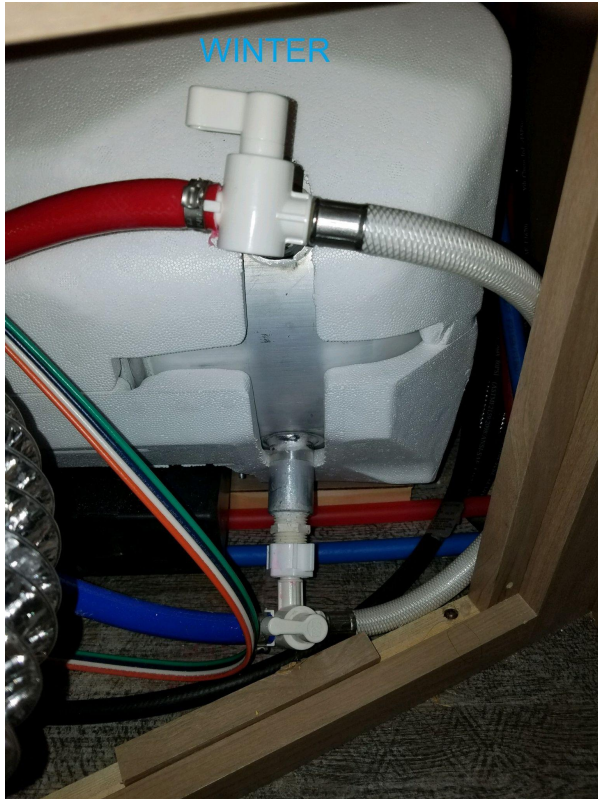

17. Turn on water pump to fill water heater
18. When water starts flowing from outdoor pressure release valve, turn off water pump and close pressure release valve
19. Turn off water pump
20. If bleach was added to fresh water, empty fresh water tank and refill with filtered water