



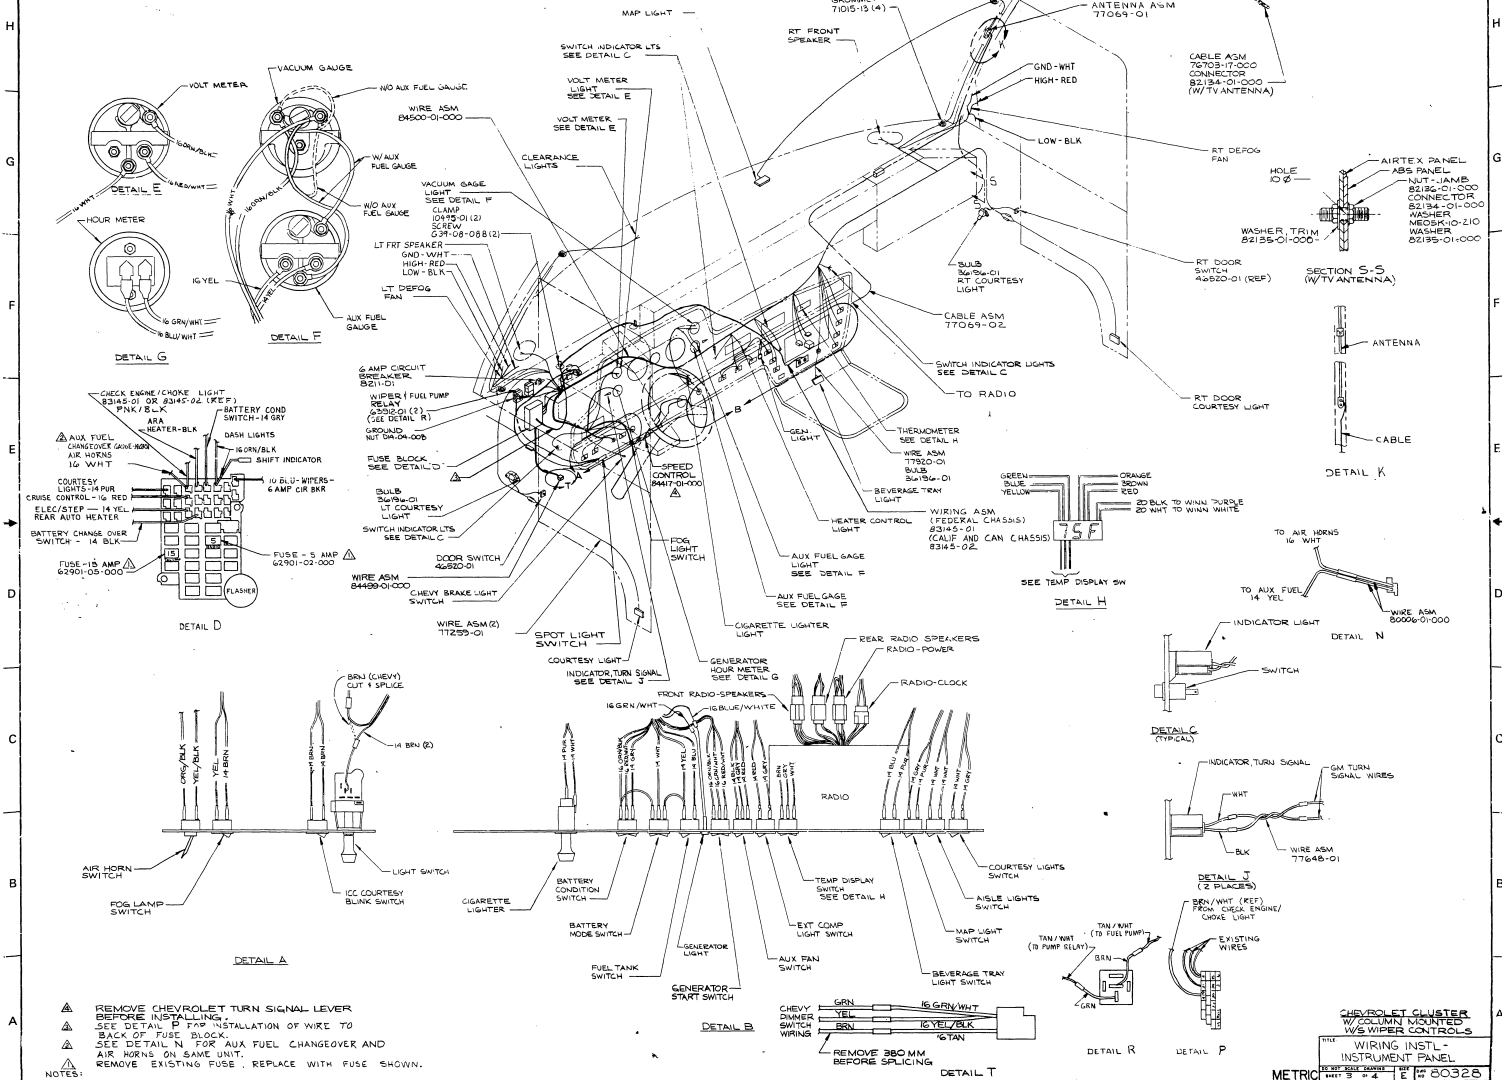

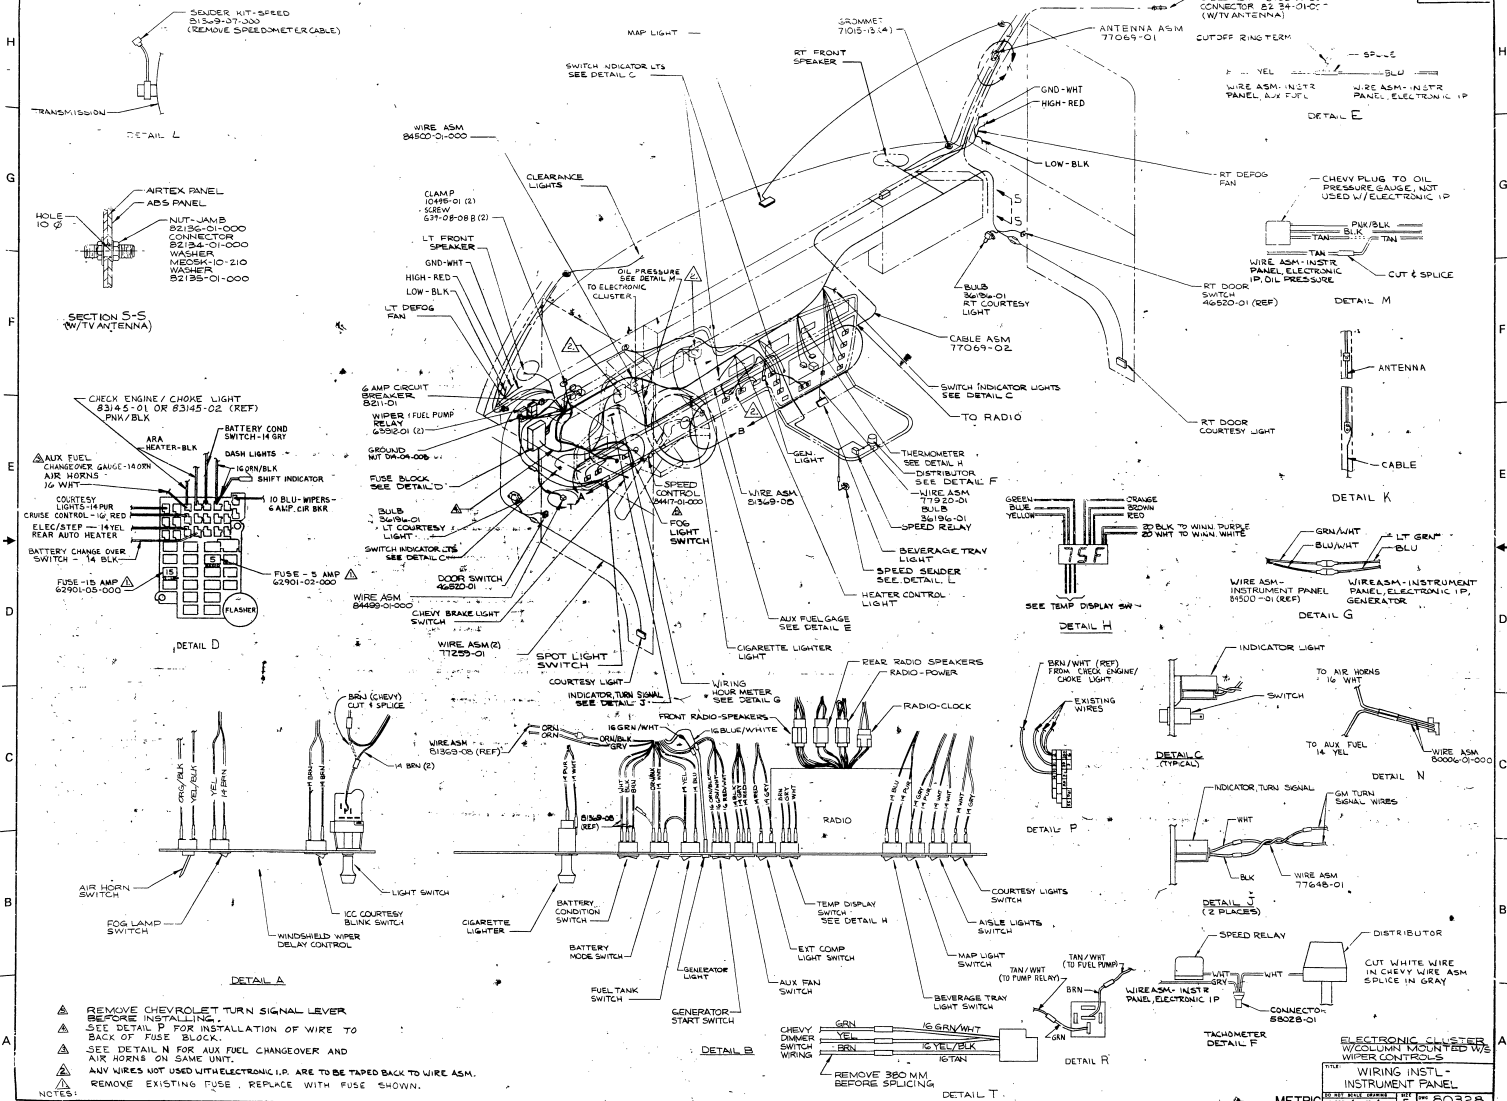

- ▲ REMOVE CHEVROLET TURN SIGNAL LEVER BEFORE INSTALLING.
- ▲ SEE DETAIL P FOR INSTALLATION OF WIRE TO BACK OF FUSE BLOCK.
- ▲ SEE DETAIL N FOR AUX FUEL CHANGEOVER AND AIR HORNS ON SAME UNIT.
- ▲ ANY WIRES NOT USED WITH ELECTRONIC I.P. ARE TO BE TAPED BACK TO WIRE ASM.
- ▲ REMOVE EXISTING FUSE. REPLACE WITH FUSE SHOWN.